

# 4" LED DOWNLIGHT 10W 5CCT TUNABLE

#### **INSTALLATION INSTRUCTIONS**




- Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- THE RETROFIT KIT IS ACCEPTED AS A COMPONENT OF A LUMINAIRE WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY CSA OR AUTHORITIES HAVING JURISDICTION.


## SAFETY INSTRUCTIONS

- 1. Read instructions carefully before atempting to install this light.
- 2. Disconnect power before installing or servicing.
- 3. This light must be wired in accordance with the local codes and ordinances.

### COLOR TEMPERATURE SETTING

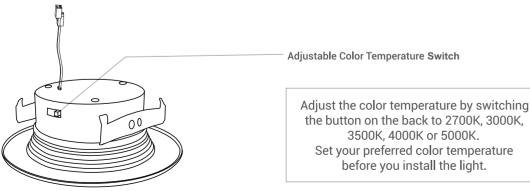


# PARTS AND HOUSING DIMENSIONS

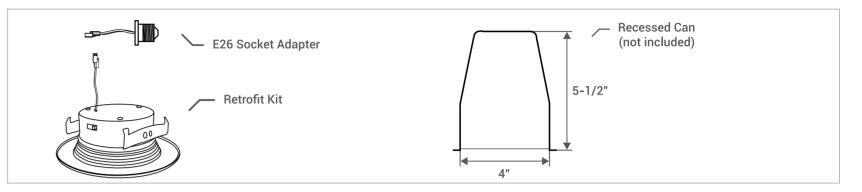

#### INSTALLATION INSTRUCTIONS

- 1. Unscrew the wing nut inside the can to remove the socket bracket. Disengage the socket from the socket bracket by pressing in on the two spring clips (Fig. 1).
- 2. Thread the socket adapter into the socket (Fig. 2).
- 3. Plug in the two cord plugs together (Fig. 3).
- 4. Tuck all the wires carefully into the can and push retrofit kit into the can (Fig. 4).
- 5. Turn on the power to operate the unit.

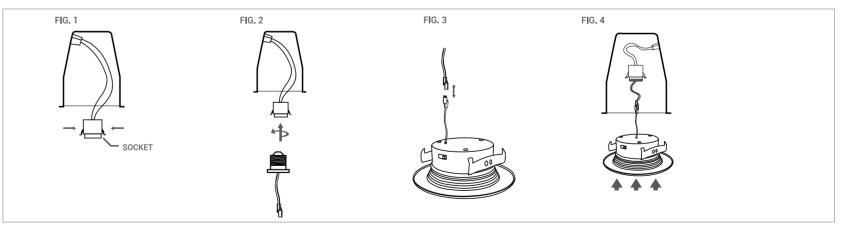

Sunshine Lighting Company • 744 Clinton Street Brooklyn, NY 11231, USA • T. 718.768.7000 • F. 718.768.0970 • www.sunlite.com